



+



Partnered for your convenience

## **Alexa Voice Commands for the Lennox Smart Thermostats (S40, S30, E30 and M30) Skill**

### **1. Set your device to a specific temperature:**

- "Alexa, set (thermostat name) to (75) degrees"
- "Alexa, change temperature to (75)", Alexa will ask you to confirm which device, just say your thermostat's name.
- "Alexa, turn temperature to (75)", Alexa will ask you to confirm which device, just say your thermostat's name.

### **2. Turn UP the temperature a set amount:**

- "Alexa, increase (thermostat name) by (3) degrees"
- "Alexa, raise (thermostat name) by (3) degrees"

### **3. Turn UP the temperature by 2 degrees:**

- "Alexa, increase (thermostat name) temperature"
- "Alexa, make (thermostat name) warmer"

### **4. Turn DOWN the temperature a set amount:**

- "Alexa, decrease (thermostat name) by (3) degrees"
- "Alexa, lower (thermostat name) temperature by (3) degrees"

### **5. Turn DOWN the temperature by 2 degrees:**

- "Alexa, lower (thermostat name) temperature",
- "Alexa, make (thermostat name) colder"

### **6. Ask for the current temperature**

- "Alexa, what is the temperature of (thermostat name)", Alexa will reply with current temperature.

### **7. Ask for thermostat setpoints**

- "Alexa, what is the (thermostat name) set to?", Alexa will reply with the current thermostat setpoints and the thermostat mode (heat, cool or auto)